

ODX-6000

6000VA DC/AC INVERTER

GENERAL FEATURES:

Sine wave output voltage
Suitable for motors control
Adjustable output frequency
Adjustable output voltage
High input-output isolation 3000Vrms
Remote off opto-coupled
Alarm by isolated relay contacts

Configurable input: Reverse or Mid power Remote control via RS232

Remote Control via RS2

CAN BUS (optional)

Parallelable output (optional)

Railway version EN50155 (optional) Fire and smoke: EN45545-2 approved













	24Vdc	48Vdc	72Vdc	110Vdc
	16.8 30V	33.6 60V	50.4 90V	77 138V
400Vac	ODX-6000-7502	ODX-6000-7505	ODX-6000-7506	ODX-6000-7507
	3500 W	6000 W	6000 W	6000 W




INPUT	
Input voltage range	-30, +25% Vin nom
Maximum input ripple	5% Vin nom (Vrms, 100 Hz)
ОИТРИТ	
Nominal output voltage (Von)	See table
Output voltage range	20100% of Von (adjust via remote control)
Output frequency	50 / 60 Hz via DIP-switch, 575Hz via RS-232
Load regulation	< 4.5%
Line regulation	< 2% Vin -25% +25% < 10% Vin -30% +30% < 20 % Vin -40 % +40 % (100ms)
Output wave distortion THD	< 2% (average of 16 samples)
Output HF ripple	< 2.5%
ENVIRONMENTAL	
Storage temperature	-40 80 °C
Operating temperature: Full load Operating temperature: 62.5 % load	-40 55 °C (EN50155 OT2) -40 70 °C (EN50155 OT4)
Relative humidity without condensation	5 95%
Maximum altitude	2000m at full load, 2500m at 95% of load
Cooling	Internal controlled internal fan
Shock and Vibrations according to	EN61373:2011 Category 1 Class B body mounted
MTBF (MIL-HDBK-217-E; Gb, 25°C)	100.000 h
EMC	
Immunity according	EN61000-6-2, EN50121-3-2
Emissions according	EN61000-6-4, EN50121-3-2
SAFETY	
Dielectric strength: Input /output	3000 Vrms / 50 Hz / 1min
Dielectric strength: Output / Earth	1500 Vrms / 50 Hz / 1min
Dielectric strength: Input / Earth	500 Vrms / 50 Hz / 1min
Safety according to	EN60950-1, EN62368-1
Fire and smoke	EN45545-2 approved (only for option T , railway version)
MECHANICAL	
Weight	< 8950 g
Protection degree	IP20
PROTECTIONS	
Against overloads	Current and I ² T limited (see overload protection curve)
Against over-temperature	Shutdown with auto-recovery
CONTROL	
Output OK LED	Green
Input OK LED	Green
Alarm LED	Red
Input alarm	Open when alarm. Maximum rating: 0.16 A at 160 Vdc
Output alarm	Open when alarm. Maximum rating: 0.16 A at 160 Vdc
Remote OFF input	OFF applying 15143 Vdc (acc. to EN50155), Impedance > 35 k Ω
Configurable input (reverse or mid-power)	ON: applying 15143 Vdc (acc. to EN50155), Impedance > 35 k Ω

Note-1: Is not recommended to handle connectors below -25°C



ORDERING CODES

	Input voltage	Input voltage	Max. Input	Output	Output		Appar.	Output peak current		Efficien.	No load input
Model	DC [V]	range [V]	current [A]	AC [V]	current [A]	output power [W]	output power [VA]	5s (rms) [A]	(lopk) 10ms [A]	[%]	current [A]
ODX-6000-7502	24	16.8 - 30	232	400	6.50	3500	4500	7.8A	20	91.0	1.70
ODX-6000-7505	48	33.6 - 60	191	400	8.66	6000	6000	11.5	20	93.6	0.85
ODX-6000-7506	72	50.4 - 90	127	400	8.66	6000	6000	11.5	20	94.3	0.58
ODX-6000-7507	110	77 - 138	83	400	8.66	6000	6000	11.5	20	94.2	0.38

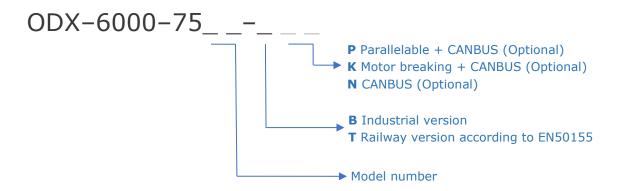


Option P (Parallelable) includes CANBUS port.

Option K (Motor breaking) allows a motor to slow down faster. It includes internal resistors to dissipate energy from the motor; up to 1200Wkp and 800W for 5s. This option includes CANBUS port.


Please check availability for P, K or N options Accessories must be ordered in a separate order line.



BLOCKS DIAGRAM

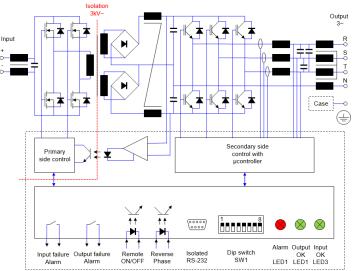


CONNECTIONS

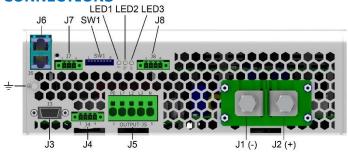

J1	-Vin	Terminal M8
J2	+Vin	Terriniai Mo
J5 - 1	Protective Earth	
J5 - 2	Output R	
J5 - 3	Output S	Cables 2.5 4mm ²
J5 - 4	Output T	
J5 - 5	Output Neutral	
J4 - 1	+ Configurable input	
J4 - 2	- Configurable input	Phoenix Contact MC1.5/4-GF-3.81
J4 - 3	+ Remote	Recommended female:
J4 - 4	- Remote	Phoenix Contact MC1.5/4-STF-3.81
J8 - 1, 2	Output alarm	Filoenix Contact MC1.5/4-511-5.01
J8 - 3, 4	Input alarm	
J7 - 1	CAN L (optional Can bus)	Phoenix Contact MC1.5/3-GF-3.81
J7 - 2	CAN H (optional Can bus)	Recommended female:
J7 - 3	GND CAN	Phoenix Contac MC1.5/3-STF-3.81
J3 - 2	RS-232 Rx	
J3 - 3	RS-232 Tx	Female D-Sub DB9
J3 - 5	RS-232 GND	Terriale D-Sub DD9
J3 rest	Not connected	
J6A - J6B	Optional Parallel operation	RJ45
SW1 - 1	Master / Slave	ON (down): Slave
SW1 - 2	Parallel / Stand alone	ON (down): Stand alone
SW1 - 6	Local / Remote	ON (down): Remote
SW1 - 7	50Hz / 60Hz	ON (down): 60Hz
SW1 rest	Not used	

POWER DERATING vs AMBIENT TEMP.

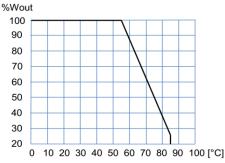

DESCRIPTION

The ODX-6000 consists of three phase sine-wave DC-AC inverters with galvanic isolation between input and output.

The unit allows:

- Changing the output frequency by means of DIP-switch-7 of SW1. OFF: 50Hz or default programmed, ON: 60Hz
- Change local/remote (waiting RS-232 commands) by means of DIP-switch-6 of SW1. OFF: local, ON: remote
- Shutdown applying voltage output 15 to 143Vdc on pins 3 and 4 of J4
- Start-up motors by means of a soft start. In the start-up, the output voltage rises linearly from 0V to set voltage and the frequency from the initial to the set one. The startup ramp slope may be changed via RS-232
- Set the rotation speed of a motor according to the appropriate Voltage/Frequency ratio.
- Configurable input (pin 1 and 2 of J4):
 - Reverse mode: Changing the rotation direction for the next start-up of a motor by applying voltage between 15 and 143Vdc.
 - Mid power mode: Changing the output frequency in V/F mode from nominal to a mid-power frequency by applying voltage between 15 and 143Vdc.
- Monitoring the status of the input and output voltage through the contacts of two separate solid state relays.
- Set and monitor parameters via RS-232.

The ODX-6000 is equipped with a maximum average power protection as well as maximum output peak current protection. This protects the semiconductors even when an output short-circuit occurs. It also features a disable function for input under-voltage, which allows protecting the batteries from harmful discharges.

START-UP

- The unit has 6 threaded holes for the fixation on a mounting surface.
- The unit has internal fans. For an appropriate cooling, the air input and output should be free of elements that cause and an air flow reduction (minimum recommended distance to other objects 90mm).
- Make connections as shown in the figure.
- The default output frequency is 50Hz. For 60Hz simply actuate the dip-switch as indicated in the figure.

For safety reasons, the following requirements must be met:

- Provide the equipment with some kind of protective enclosure that complies with the electrical safety directives in effect within the country where the equipment is installed.
- Include an input fuse with a rating immediately higher than the maximum input current.
- Use cables of adequate cross-section to connect inputs and outputs. The following table lists the maximum currents and the minimum cross-sections for the cables used for each power connection.

	Input	Input	Input	Input	Output
	24V	48V	72V	110V	400V
Maximum current	232 A	191 A	127 A	83 A	8.7 A
Cable cross-section	150	95	50	25	2.5
	mm ²	mm²	mm ²	mm²	mm ²




PARALLEL OPERATION

The models 75xxT**P**N are designed to work in parallel with one unit set as a MASTER and the rest as SLAVES.

For this mode of operation, it is necessary to connect the MASTER/SLAVE port with a cable RJ45 FTP cat 6 (or higher) from J6B of the first unit to J6A of the following, and the last unit J6B to J6A of the first unit in a ring connection.

In addition, it is necessary to interconnect the output port respecting the phase order, as shown in the diagram:

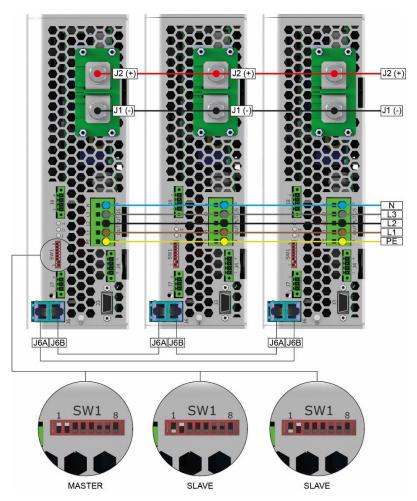

Example for 3 units working in parallel mode

STAND ALONE OPERATION

The models 75xxTPN, can operate stand alone with no connections, setting the dip-switch SW1-1 OFF (MASTER), and SW1-2 ON (Alone) as the diagram show:





RS232 communication port

It is possible to control and monitor de unit via RS232 by means a terminal emulator like "Tera Term" or "Putty". Also it is possible to control and monitor de unit directly using the protocol showed in table:

Protocol configuration: ASCII code, 57600 bauds, parity none, 8 bits, 1bit stop

Hea	der	Function	Parai	meter	Returns	Explanation					
			١	/	PTV===.=	Input voltage in Volts					
			•	,	PTv∎≡∎.≡	Input voltage ripple in Volts					
			١	ſ	PTYRN===== [13]YSN===== [13]YTN=====	Output voltage in Volts RMS Phase-Neutral ([13] = char 13 of ASCII code)					
			!	I	PTIR===.==[13] S===.== [13] T===.==	Output current in Amps RMS ([13] = char 13 of ASCII code)					
			7	Γ	PTT===.=	Internal temperature1 in K					
			1	t	PTtmm.m	Internal temperature 2 in K					
			F	F	PTF===.=	Nominal output frequency in Hz					
		L	1	f	PTf∎≡∎.≡	Actual output frequency in Hz					
				/	PTy∎∎∎.∎	Actual output voltage set-point in V					
			s		PTSmmm.m	Inverter state 999.9 → Enabled 000.0 → Disabled 222.2 → Blocked by overload 111.1 → Blocked by overload or shortcircuit					
			M R		PTM===	Model number					
					PTR	Firmware version					
			Otl	her	PTE	Command not supported					
			1	===.=	OK / ERR	Set the low input voltage timed shutdown in V					
			2		OK / ERR	Set the minimum alarm input voltage in V					
			3		OK / ERR	Change the status bit (after start up enabled with SW1:6 =LOCAL and disabled with SW1:6 =REMOTE) 999.9 → Inverter enabled 000.0 → Inverter disabled					
			4		OK / ERR	Set the output voltage Phase-neutral in Vrms (Vo)(output must be stopped) 040.0≤ ■■■.■ ≤ 230.0					
Р	R	-	5		OK / ERR	Set the maximum output current in Arms 20% I _{nom} ≤ ■■■.■ ≤ 100% I _{nom}					
			6		OK / ERR	Set the nominal output frequency in Hz (Fo) (output must be stopped) 005.0 ≤ ■■■.■ ≤ 075.0					
			7		OK / ERR	Set the alarm maximum output current 0 < ■■■.■ ≤ 100% I _{max_warning}					
		G	8	===.=	OK / ERR	111.1 → Reset the inverter					
		_	9		OK / ERR	Set the number of soft start ramp cycles at initial frequency. 001.0 ≤ ■■■.■ ≤ 020.0					
			L		OK / ERR	Set the minimum input starting voltage in Volts V _{in min} ≤ ■■■.■ ≤ 105% of V _{in nom}					
			0		OK / ERR	Set the initial frequency in the startup (Fi) 005.0 ≤ ■■■.■ ≤ 075.0 Set the ramp-up in increment of "N" cycles per Hz in mode V/F, frequency change					
			Р ===.= ок/		OK / ERR	or start-up (Note-1) 001.0 ≤ ■■■.■ ≤ 100.0					
			Q	■■■.■	OK / ERR	Set the ramp-down in decrement of "N" cycles per Hz in mode V/F (Note-1) 002.0 ≤ ■■■.■ ≤ 100.0					
			Y OK/ER		OK / ERR	Change the working mode of the input J4-1,J4-2 111.1 → Input as reverse phase control (default) 222.2 → Input as mid-power control (Note-2)					
			Х		OK / ERR	Set the mid-power frequency for V/F mode by the use of input J4-1,J4-2 005.0 ≤ ■■■.■ ≤ 75.0					
			1		OK / ERR	Set a new output frequency in Hz (output must be run and not stored in memory) 005.0 ≤ ■■■.■ ≤ 075.0					
			2		OK / ERR	Set a new output voltage in Volts (output must be run and not stored in memory) 040.0 ≤ ■■■.■ ≤ 230.0					
		M	3		OK / ERR	Set a new output frequency in Hz in mode V/F (output must be run and not stored in memory) 005.0 ≤ ■■■.■ ≤ 075.0					
			4		OK / ERR	Changes the output phase order (output must be run and not stored in memory) 111.1 → Phase RST (direct phase) 222.2 → Phase SRT (reverse phase)					



CAN communication port (optional)

It is possible to control and monitor the unit using the CAN connection with the CANOpen protocol. It is provided an .eds file with all the objects available.


Protocol configuration: 250kbit/s (N version), 500kbit/s (P version), NODE ID: 1. The most relevant objects can be found in the following table:


Index	Subindex	Name	Type	Attribute	Explanation
0x6001	0x00	Input voltage	UINT32	ro	Input voltage in tenths of Volt
0x6002	0x00	Input Ripple Voltage	UINT32	ro	Input voltage ripple in tenths of Volt
0x6003	0x01	Vrn	UINT32	ro	Output voltage in Volts Phase R-Neutral
0x6003	0x02	Vsn	UINT32	ro	Output voltage in Volts Phase S-Neutral
0x6003	0x03	Vtn	UINT32	ro	Output voltage in Volts Phase T-Neutral
0x6004	0x01	IR	UINT32	ro	Output current in hundredths of Amp Phase R
0x6004	0x02	IS	UINT32	ro	Output current in hundredths of Amp Phase S
0x6004	0x03	IT	UINT32	ro	Output current in hundredths of Amp Phase T
0x6005	0x00	Internal temperature Secondary	UINT32	ro	Internal temperature1 in tenths of K
0x6006	0x00	Internal temperature Primary	UINT32	ro	Internal temperature 2 in tenths of K
0x6007	0x00	Nominal output frequency	UINT32	ro	Nominal output frequency in Hz
0x6008	0x00	Actual output frequency	UINT32	ro	Actual output frequency in Hz
0x6009	0x00	Actual output voltage set-point	UINT32	ro	Actual output voltage set-point in V
0x600A	0x00	Inverter state	UINT16	ro	Inverter state $3 \rightarrow$ Enabled $0 \rightarrow$ Disabled $2 \rightarrow$ Blocked by overload $1 \rightarrow$ Blocked by overload or shortcircuit
0x600B	0x00	Product ID	UINT16	ro	Model number
0x600C	0x00	Firmware version	UINT16	ro	Firmware version
0x6100	0x00	Low input voltage timed shutdown	UINT32	rw	Set the low input voltage timed shutdown in tenths of V
0x610B	0x00	Input voltage minimum warning	UINT32	rw	Set the minimum alarm input voltage in tenths of V
0x6101	0x00	AC status bit ¹	UINT8	rw	Change the status bit (after start up enabled with SW3 =LOCAL and disabled with SW3 =REMOTE) 1 → Inverter enabled 0 → Inverter disabled
0x6102	0x00	Nominal output voltage	UINT32	rw	Set the output voltage Phase-neutral in Vrms (Vo) (output must be stopped) 40≤ x ≤ 230
0x6103	0x00	Maximum output current	UINT32	rw	Set the maximum output current in Arms (per mille) 200‰ I _{nom} ≤ ■■■■ ≤ 1000‰ I _{nom}
0x6104	0x00	Nominal frequency	UINT32	rw	Set the nominal output frequency in Hz (Fo) (output must be stopped) $5 \le x \le 75$
0x6105	0x00	Alarm maximum output current	UIN32	rw	Set the alarm maximum output current in Arms (per mille) 0‰ ≤ x ≤ 1000‰ I _{max_warning}
0x6106	0x00	Inverter reset ¹	UINT8	wo	1 → Reset the inverter
0x6107	0x00	Minimum starting input voltage	UINT32	rw	Set the minimum input starting voltage in tenths of Volts
0x6108	0x00	Start frequency	UINT32	rw	Set the initial frequency in the startup (Fi) 5 ≤ x ≤ 75
0x6109	0x00	Ramp up value	UINT32	rw	Set the ramp-up in increment of "N" cycles per Hz in mode V/F, frequency changes or start-up (Note-1) 1 ≤ x ≤ 100
0x610A	0x00	Ramp down value	UINT32	rw	Set the ramp-down in decrement of "N" cycles per Hz in mode V/F (Note-1) 2 ≤ x ≤ 100 Set the number of soft start ramp cycles at initial frequency
0x610C	0x00	Soft-start cycles	UINT32	rw	1 ≤ x ≤ 20
0x6120	0x00	confi_inversion	UINT8	rw	Change the working mode of the input J4-1,J4-2 0 → Input as reverse phase control (default) 1 → Input as mid-power control (Note-2)
0x6121	0x00	Mid_power _frequency	UINT32	rw	Set the mid-power frequency for V/F mode by the use of input J4-1, J4-2. $5 \le x \le 75$
0x6200	0x00	Runtime target frequency	UINT32	wo	Set a new output frequency in Hz (output must be run and not stored in memory) $5 \le x \le 75$
0x6201	0x00	Runtime output voltage	UINT32	wo	Set a new output voltage in Volts (output must be run and not stored in memory) $40 \le x \le 230$
0x6202	0x00	Runtime frequency V/F	UINT32	wo	Set a new output frequency in Hz in mode V/F (output must be run and not stored in memory) 5 ≤ ■■■ ≤ 75
0x6203	0x00	Change phase order	UINT32	wo	Changes the output phase order (output must be run and not stored in memory) 1 → Phase RST (direct phase) 2 → Phase SRT (reverse phase)


Note-1: If AC voltage command (0x6101 -> "AC status bit" to 1) is sent to the unit and then the "inverter reset" is requested (0x6106), it is necessary to send again AC voltage command (0x6101 -> "AC status bit" to 1) to generate the AC voltage at the output.



 Note 1:

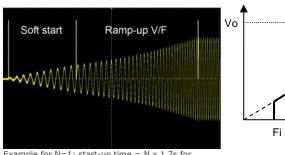




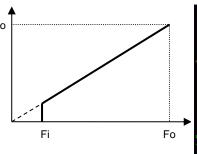

Mode V/F curve

Note 2:

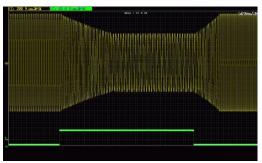


Example for change from 50Hz / 400V to 30HZ and 240V with ramp-down of 2 cycles /Hz and ramp-up de 1 Cycle/Hz. Yellow: output voltage and Green: Mid-Power input signal

WORKING PARAMETERS


Thermal protection							
Internal warning temperature (output alarm)		8	8		°C		
Internal shutdown temperature		9	2		°C		
Internal restart temperature		7	5		°C		
Internal temperature of fan start-up		4	5		°C		
Input voltage parameters	24V	48V	72V	110V			
High input voltage shutdown instantaneous	33.6	62.4	93.6	143.0	Vdc		
High input voltage timed shutdown (t) (Input alarm)	31.2	60.0	90.0	137.5	Vdc		
Start-up voltage	19.2	38.4	57.6	88.0	Vdc		
Low input voltage timed shutdown (t) (Input alarm)	16.8	33.6	50.4	77.0	Vdc		
Low input voltage instantaneous shutdown	14.4	28.8	43.2	66.0	Vdc		
Time to shutdown (t)	500				ms		
Output voltage parameters							
Output voltage phase-neutral		230					
Output under-voltage shutdown		< 85% of setting 1000ms					
Warning voltage (output alarm)		< 90% of setting 200ms					
Initial start-up frequency		Ę	5		Hz		
Soft start duration		1 cy	/cle				
Ramp-up V/F		1 Hz/	cycle				
Output current parameters							
Maximum continuous output current	6.52	8.66	8.66	8.66	А		
Warning current (output alarm)	6.20	8.22	8.22	8.22	А		
Maximum overload I ² t		See figure below					
Time between restart attempts		40	00		ms		
Number of attempts of consecutive overload		5					
Working failures and reset							
Lock for continuous overload or internal failure		Unlimit	ed time				
Reset time by input disconnection		>	2		min		

Configurable parameters underlined

OVERLOAD PROTECTION

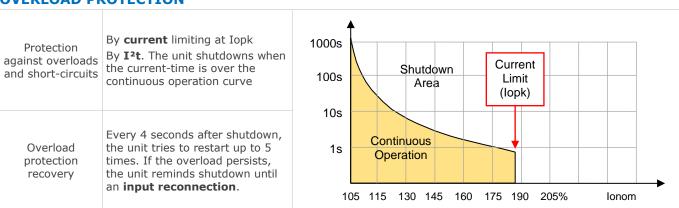



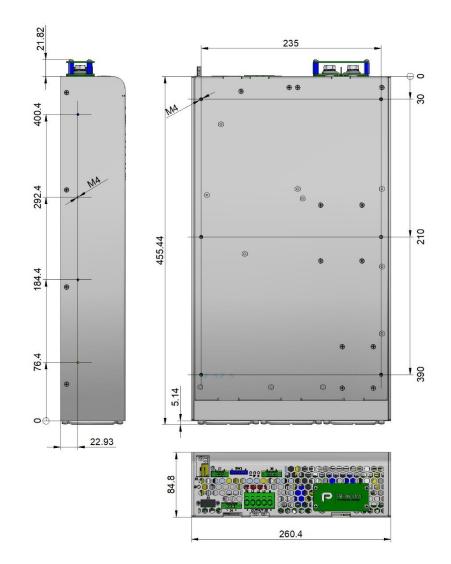

NOTE: All the fixing holes are M4. Maximum screw length inside de inverter 5mm.

ACCESSORIES

Description	Notes	CODE
Mounting brackets kit	Contains two brackets and screws	NP-9282





CE EU DECLARATION OF CONFORMITY

The undersigned, representing the following:

Manufacturer: PREMIUM, S. A.,

Address: C/ Dolors Aleu 19-21, 08908 L'Hospitalet de Llobregat, SPAIN

herewith declares that the product:

Type: DC/AC converter

Models: **ODX-6000-7502 ... 7507**

Complies with the essential protection requirements of the following EU directives:

2014/35/EU Low voltage / The electrical equipment (safety) regulations

2014/30/EU EMC / Electromagnetic compatibility regulations

SI 2016 No 1091

2011/65/EU Annex II and its amendment 2015/863/EU RoHS / Restriction of the use of certain hazardous substances in electrical and electronic equipment

This declaration applies to all specimens manufactured identical to the samples submitted for testing/evaluation.

Assessment of compliance of the product with the requirements relating to aforementioned directives, was performed by Premium S.A. and is based on the following standards:

EN IEC 62368-1:2020 Safety. Audio/video information and communication technology equipment

EN IEC 61000-6-4:2019 Generic emission standard
EN IEC 61000-6-2:2019 Generic immunity standard

EN 50155:2021* Railway applications. Electronic equipment used on rolling stock material

EN 50121-3-2:2016* Railway applications. EMC Rolling stock equipment

* Optional, See annexe

CE marking year: 2019

Notes:

For the fulfilment of this declaration the product must be used only for the aim that has been conceived, considering the limitations established in the instructions manual or datasheet.

L'Hospitalet de Llobregat, 24-04-2023

Albert Sole Technical Director **PREMIUM S.A.** is an ISO9001and ISO14001 certified company by **Bureau Veritas**



UK UKCA DECLARATION OF CONFORMITY

The undersigned, representing the following:

Manufacturer: PREMIUM, S. A.,

Address: C/ Dolors Aleu 19-21, 08908 L'Hospitalet de Llobregat, SPAIN

herewith declares that the product:

Type: DC/AC converter

Models: **ODX-6000-7502 ... 7507**

Complies with the essential protection requirements of the following regulations:

SI 2016 No 1101 Low voltage / The electrical equipment (safety) regulations

SI 2016 No 1091 EMC / Electromagnetic compatibility regulations

SI 2012 No. 3032 RoHS / Restriction of the use of certain hazardous substances in electrical and

electronic equipment

This declaration applies to all specimens manufactured identical to the samples submitted for testing/evaluation.

Assessment of compliance of the product with the requirements relating to aforementioned regulations, was performed by Premium S.A. and is based on the following standards:

BS EN 62368-1:2020 Safety. Audio/video, information and communication technology equipment

BS EN 61000-6-4:2019 Generic emission standard:
BS EN 61000-6-2:2019 Generic immunity standard

BS EN 50155:2021* Railway applications. Electronic equipment used on rolling stock material

BS EN 50121-3-2:2016* Railway applications. EMC Rolling stock equipment

UKCA marking year: 2021

Notes:

For the fulfilment of this declaration the product must be used only for the aim that has been conceived, considering the limitations established in the instructions manual or datasheet.

L'Hospitalet de Llobregat, 24-04-2023

Albert Sole Technical Director

PREMIUM S.A. is an ISO9001and ISO14001 certified company by **Bureau Veritas**

^{*} Optional, See annexe



ANNEXE

	Annlic	able values for	the di	ifferent s	section	ns of ti	he norm	FN50155	2017			
4.3.1	Working altitude	Up to 2000m	the u	increme s	occio.	13 01 0	ne nom	1 11130133.	2017			
4.3.2	Ambient temperature	Class OT2 (-40 Class OT4 (-40										
4.3.3	Switch-on extended operating temp.	ST1		·								
4.3.4	Rapid temperature variations	H1										
4.3.5	Shocks and vibrations	According EN61	1373:2	010 Cate	gory 1	class E	3					
					I							
		Test	N	lorm	Ро	rt		uency 230MHz	Limits 40dB(μV/m) Qpk at 10m			
		Radiated			_			Hz1GHz	47dB(μV/m) Qpk at 10m			
		emissions	IEC	55016	Cas	se		3GHz	Do not apply			
								6GHz	Internal freq. < 108MHz			
		Conducted emissions	IEC	55016	Inp	ut		z500kHz z30MHz	99dB(μV) Qpk 93dB(μV) Qpk			
		CITIISSIONS					JOORIII	25011112	33db(µv) Qbk			
		Test		Norm	1	P	ort	Severity	Conditions	P		
		Electrostation discharge	-	IEC61000)-4-2	C	ase	±8kV ±8kV	Air (isolated parts) Contact (conductive parts)	В		
	EMC Electromagnetic	discridinge						20V/m	0.081.0GHz M. 80% 1kHz			
4.2.6	Compatibility	Radiated		IEC61000)-4-3	X/Y/	Z Axis	10V/m	1.42.1GHz M. 80% 1kHz	A		
4.3.6	EN50121-3-2:2016	high-frequen	icy			, ,		5V/m 3V/m	2.12.5GHz M. 80% 1kHz 5.16Ghz M. 80% 1kHz			
						In	put	±2kV	3.106112 11. 00 70 18112			
		Fast transien	nts	IEC61000)-4-4		itput	±2kV	Tr/Th: 5/50 ns	Α		
				-		Signal PE		±2kV ±1kV	_			
		Surge		IEC61000-4-5		Input L to L		±1kV	T (T) 1 2 (F)	-		
							L to PE	±2kV	Tr/Th: 1.2/50μs	В		
		Conducted RF		IEC61000-4-6 Out Sig			iput	10V 10V				
						gnal	10V	0.1580MHz M. 80% 1kHz	Α			
							PE	10V				
		Magnetic field IEC61000-4-8 X/Y/Z A						300A/m	0Hz, 16.7Hz, 50/60Hz	Α		
		P = Performanc	ce crite	ria, L= Liı	ne, PE:	= Prote	ective Ear	rth				
4.3.7	Relative humidity	Up to 95%										
5.1.1.2	DC power supply range	From 0.70 to 1			us							
5.1.1.3	Temporary DC power supply fluctuation	From 0.60 to 1 From 1.25 to 1			ut dam	nage						
5.1.1.4	Interruptions of voltage supply	Class S1 (witho	out inte	erruptions	;)							
	Input ripple factor	10% peak to pe							of a second			
5.1.3	Supply change-over Input reverse polarity	0.6 Un duration		is (withou	it inter	ruption	is). Perio	ormance crite	Prion A			
7.2.7	protection Protective coating for PCB	By external fus	se									
10.7	assemblies	Class PC2	action				D	loutine				
		1 Visual Inspe 2 Performance						loutine				
		3 Power suppl						Routine				
		4 Insulation to		storago to	oct.		R	Routine				
		5 Low temper 6 Low temper					T	- Type				
13.3	Tests list	7 Dry heat tes	st				Т	Туре				
15.5	1 0000 1100	8 Cyclic damp 9 Salt mist tes		test			Т	уре				
		10 Enclosure pr		on test (II	P code)	_	-				
		11 EMC test		•		,		уре				
		12 Shocks and			tost			ype	19C and load 1000/			
		13 Equipment s 14 Rapid Temp						loutine: at 40 Type	0°C and load 100%			
					-500			/ F. =				



Authorised, valued-added distributor

Australia & New Zealand





Sydney Head Office 4 Beaumont Road, Mt Kuring-Gai, NSW 2080 Australia



1800 251 380



(⊠) sales@powerbox.com.au





sales@powerbox.co.nz

New Zealand Sales Office

1a Henry Rose Place,

09 4158 320

Albany, Auckland New Zealand 0632

