

Medical / Industrial AC-DC Power Supply

1500 W Series with 5 V/2 A Standby / MEB-1K5A series



Highlights & Features

- Up to 1500 Watt in 5" x 8.03" x 1.59" Package
- Up to 23.5 W/inch³ Power Density
- Full Power up to 50°C Ambient
- Up to 500 KHrs MTBF
- 5 V/2 A Standby Output
- Current Sharing
- Conformal Coating
- Class B Conducted and Radiated EMI
- LED Indicator
- Remote On/Off control
- Analog Voltage Trimming
- Intelligent Fan Speed Control
- Compliance with IEC 61000-4-6 20V/m for semiconductor applications

Safety Certifications

- IEC60601-1 3rd edition + A1+A2 CB report
- ANSI/AAMI ES 60601-1 +CAN/CSA-C22.2 NO.60601-1: (Ed.3.2005)
- UL62368-1 and CAN/CSA C22.2 No. 62368-1
- IEC 62368-1 CB report
- IEC 60950-1 CB report
- TUV EN60601-1:2006/A11/A12
- TUV EN62368-1
- CCC
- IEC 60335-1 (for 24 V model)
- IEC 61558-1/-2-16 (for 24 V model)
- TUV EN60335-1 (for 24 V model)
- TUV EN61558-1/-2-16(for 24 V model)

| Input | |
|--------------------------------------|---|
| Input Voltage | 90 Vac ~ 264 Vac |
| Input Frequency | 47 Hz ~ 63 Hz |
| Input Current | <15 A |
| Inrush Current | 40 A (typ) |
| Power Factor | >0.99 @ 115 Vac , full load |
| Efficiency ⁽¹⁾ @ 230Vac | Up to 92% |
| Touch Current (Output to PE) | <100 uA normal, <500 uA SFC |
| Earth Leakage Current (Input to PE) | <500 uA normal, <1 mA SFC |
| Output | |
| Output Voltage | 24 V 48 V |
| Output Current ⁽²⁾ | 50.0 A @ 115 Vac 0-25 A @ 115 Vac 62.5 A @ 230 Vac 0-31.25 A@230 Vac |
| Ripple & Noise | <1% Vrated pk-pk |
| Standby Power | 5 V / 2 A (No minimum load required) |
| Environmental | |
| MTBF | 500 KHrs |
| Operation Temperature ⁽³⁾ | -20°C ~70°C |
| Operation Altitude | 5000m or 54 kPa |

(1) Exclude fan power


(2) Refer to de-rating curve for detail

(3) Power de-rating with temperature above 50°C, refer to power de-rating curve for detail

Medical / Industrial AC-DC Power Supply

1500 W Series with 5 V/2 A Standby / MEB-1K5A series

Model Numbering

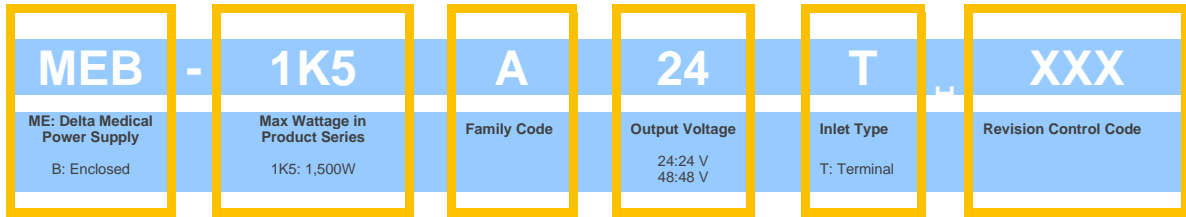

Model Information (With 5V/2A standby available)

| Model Number | Input Voltage | Output Voltage | Current Output |
|--------------|---------------------------|----------------|----------------|
| MEB-1K5A24T | 90-264 Vac ⁽⁴⁾ | 24 Vdc | 62.5 A |
| MEB-1K5A48T | | 48 Vdc | 31.25 A |

(4) Derating is needed under low AC input, please refer to derating curve for more details.

Revision Control Code

| Revision Control Code | Package |
|-----------------------|----------------|
| AAA | Delta Standard |

Medical / Industrial AC-DC Power Supply

1500 W Series with 5 V/2 A Standby / MEB-1K5A series

Specifications

Input Ratings / Characteristics

| Model Number | | MEB-1K5A24T AAA | MEB-1K5A48T AAA |
|---|---------|--|--|
| Nominal Input Voltage | | 100-240 Vac | |
| Input Voltage Range | | 90-264 Vac | |
| Nominal Input Frequency | | 50-60 Hz | |
| Input Frequency Range | | 47-63 Hz | |
| Input Current (max) | | 15 A | |
| Input Surge Voltage (max) | | 300 Vac for 500 ms | |
| Efficiency (typ) | 115 Vac | 88% | 89% |
| | 230 Vac | 91% | 92% |
| Inrush Current (typ) | | 40 A @ 264 Vac, cold start | |
| Earth Leakage Current (Input to PE) (max) | | 0.5 mA @ NC, 1.0 mA @ SFC ⁽⁵⁾ 0.2 mA @ NC, 0.4 mA @ SFC ⁽⁶⁾ | 0.5 mA @ NC, 1.0 mA @ SFC ⁽⁵⁾ 0.15 mA @ NC, 0.30 mA @ SFC ⁽⁶⁾ |
| Touch Current (Output to PE) (max) | | 0.1 mA @ NC, 0.5 mA @ SFC ⁽⁵⁾ 0.1 mA @ NC, 0.2 mA @ SFC ⁽⁶⁾ | |
| Power Factor (typ) | | 0.99 @ 115 V/60 Hz, full load 0.98 @ 230 V/50 Hz, full load | |

(5) NC: normal condition, SFC: single fault condition, Label Rev.00

(6) NC: normal condition, SFC: single fault condition, Label Rev.01 and above

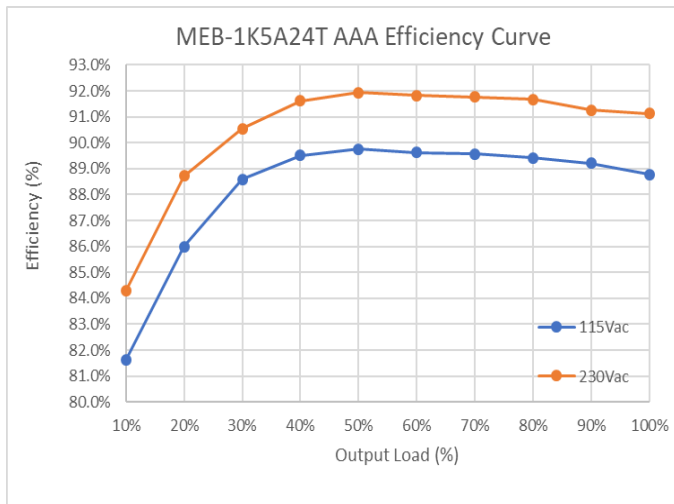


Figure 1-1. Typical efficiency Curve for MEB-1K5A24T AAA

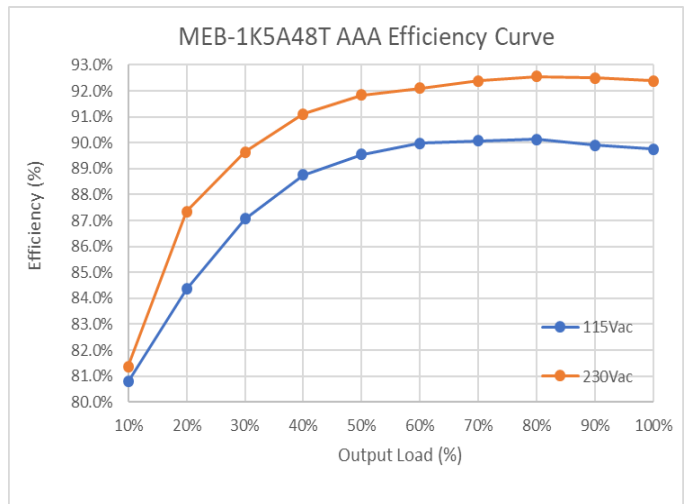


Figure 1-2. Typical efficiency Curve for MEB-1K5A48T AAA

Medical / Industrial AC-DC Power Supply

1500 W Series with 5 V/2 A Standby / MEB-1K5A series

Output Ratings / Characteristics

| | | |
|--|---------|--|
| Total Regulation | | ± 3% |
| Output Power (max) | 115 Vac | 1200 W |
| | 230 Vac | 1500 W |
| Peak Power (for MEB-1K5A48T AAA) | | Output voltage >45 V @ 2200 W power boost for 300ms (Slew rate 0.1 A/ms, load change 1 A-45.83 A @ 230 Vac) |
| Line Regulation (max) | | 1% |
| Load Regulation (max) | | 2% |
| Ripple & Noise (typ.) | 25°C | 1% pk-pk Vrated@ rated load, |
| Voltage Trimming | | ± 10% Vrated |
| Dynamic Response (Overshoot & Undershoot O/P Voltage) | | ± 10% @ with 5-100% load change |
| Start-up Time (typ.) | | 1000 ms @ 115 Vac 500 ms @ 230 Vac |
| Hold-up Time (min) | | 16 ms @ 1200 W load, 115 Vac 12 ms @ 1500 W load, 230 Vac |
| Capacitive load (max) | | 6000 uF |
| Rise time (max) | | <50 ms |
| Nominal Output Voltage of standby output (Vrated) | | 5 V |
| Nominal Output Current of standby output | | 2 A |
| Total Regulation of standby output | | ± 5% |
| Ripple & Noise of standby output | | 100 mV max |

Ripple & Noise measurement circuit

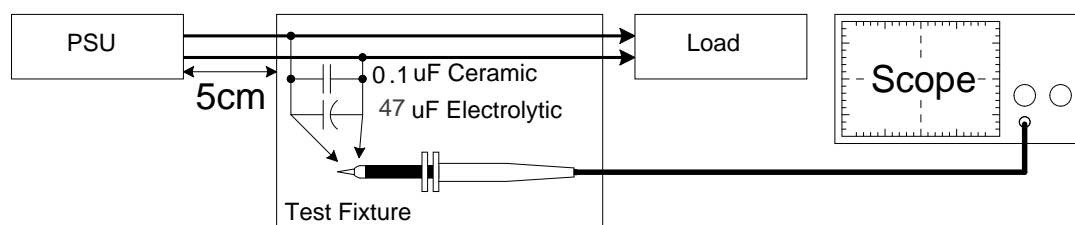


Figure 2. Ripple & Noise testing set up

Mechanical

| | | |
|------------------------|--------|--|
| Package | | Enclosed |
| Dimensions (W x L x H) | | 127 x 204 x 40.5 mm (5x8.03x1.59 inch) |
| Unit Weight | | 1.5 kg±0.2 kg (3.3 ±0.44 lb) |
| Indicator | | Green LED |
| Terminal | INPUT | M4.0 x 3 Pins (Rated 300 V/25 A) |
| | OUTPUT | M3.5 x 4 Pins (Rated 300 V/32 A) |
| Wire | | 10 ~ 12 AWG ⁽⁷⁾ (2X) (FOR 48 V model) |
| | | 8 AWG * (2X) (FOR 24 V model) |

(7) Only use wire that can withstand operating temperature of more than 105°C.

Medical / Industrial AC-DC Power Supply

1500 W Series with 5 V/2 A Standby / MEB-1K5A series

Environment

| | | |
|--|---|---|
| Surrounding Air Temperature | Operating | Absolute Maximum/Minimum Rating. -20°C to +70°C. Linear power derate from 100% load at 50°C, to 50% load at 70°C Note: see power de-rating curves below |
| | Storage | -40°C to +85°C |
| Operating Humidity | 20-90% RH (Non-Condensing) | |
| Operating Altitude | Up to 5,000 meters (up to 16,400 feet or 106-54kPa) | |
| Non-Operating Altitude | Up to 5,575 meters (up to 18,290 feet or 106-50kPa) | |
| Shock Test (Non-Operating) | 50 G, 11 ms, 3 shocks for each direction | |
| Vibration (Operating) | 5-500 Hz, 2 Grms, 15 minute for each three axis | |
| Acoustic Noise ⁽⁸⁾ (typ) @ 10% load, 25°C | 30 dB | |
| Acoustic Noise (typ) @ 80% load, 25°C | 45 B | |

(8) Acoustic Noise test set up according to ISO-7779

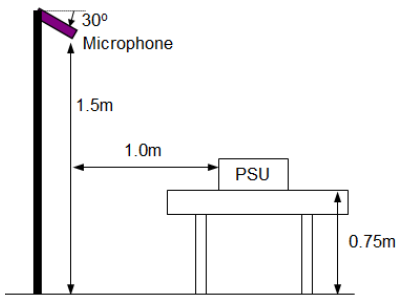


Figure 3-1. Acoustic noise testing set up

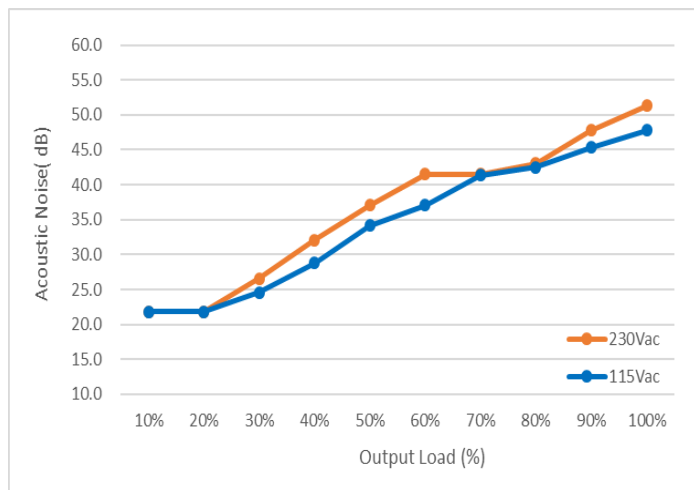


Figure 3-2. Typical acoustic noise curve for MEB-1K5A24T AAA


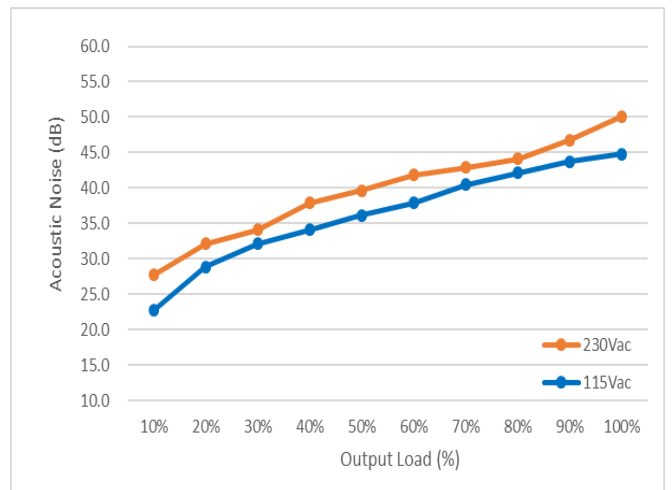


Figure 3-3. Typical acoustic noise curve for MEB-1K5A48T AAA

Medical / Industrial AC-DC Power Supply

1500 W Series with 5 V/2 A Standby / MEB-1K5A series

Power De-rating curve

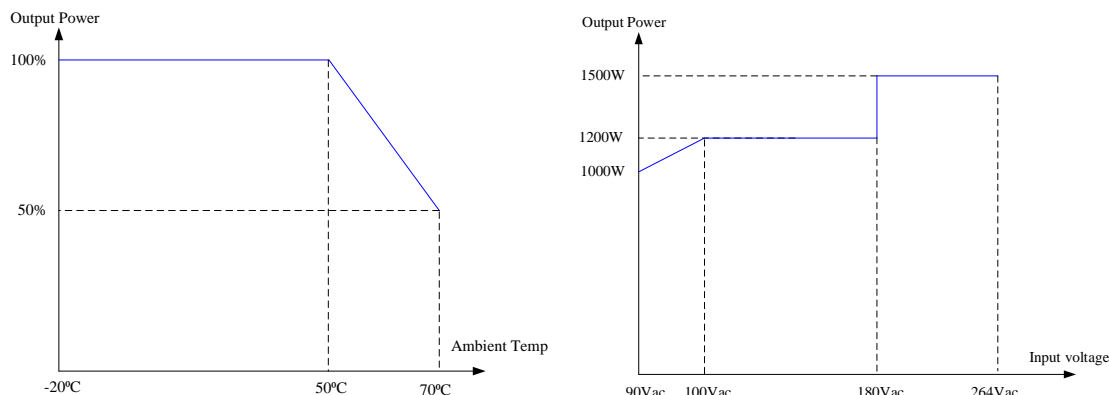

Protections (for both main output and 5Volt Standby outputs, unless otherwise indicated)

| | |
|--------------------------------|---|
| Overvoltage (max) | Main output 145% of rated normal voltage, Latch Mode |
| Over load / Over current (max) | Main output 135% of rated current, constant current (for 24 V) Main output 145% of rated current (for 48V) Standby 4.0 A max with Hiccup Mode (Non-Latching, Auto-Recovery) |
| Over Temperature | Latch Mode for Main output |
| Short Circuit | Hiccup Mode for Main output and Standby (Non-Latching, Auto-Recovery) |

Reliability Data

| | |
|---|--------------------------------------|
| MTBF (Minimum) at 115 Vac, 1200 W, 35 °C | 500 K hrs based on Telecordia SR-332 |
| Operating life (Minimum) at 115 Vac, 1000 W, 25°C | 26,280 hrs |

Safety Standards / Directives

| | | |
|---------------------------------|--|---|
| Medical Safety | CB scheme TUV Bauart UL/cUL | IEC60601-1 3rd+A1+A2 edition CB report EN/ BS EN 60601-1:2006 ANSI/AAMI ES 60601-1+CAN/CSA-C22.2 No.60601-1: (Ed.3.2005) |
| ITE Safety | CB scheme CB scheme TUV Bauart UL/cUL CCC | IEC62368-1 CB report IEC60950-1 CB report EN/ BS EN 62368-1 UL62368-1+CAN/CSA62368-1 GB4943.1-2022, GB9254-2021, GB17625.1-2012 |
| Household (for MEB-1K5A24T AAA) | CB scheme TUV Bauart | IEC 60335-1 CB report IEC 61558-1/ -2-16 CB report EN/ BS EN 60335-1 EN/ BS EN 61558-1 / -2-16 |
| CE | | In conformance with EN 60601-1: 2006 + A11: 2011 + A1: 2013 + A12: 2014& EN 60601-1-2: 2015 |
| UKCA | | In conformance with Electromagnetic Compatibility Regulations 2016 and Medical Devices Regulations 2002 (UK MDR 2002) |
| Galvanic Isolation | Input to/Output Input to/Ground Output to/Ground | 4000 Vac 1500 Vac 1500 Vac |



Medical / Industrial AC-DC Power Supply

1500 W Series with 5 V/2 A Standby / MEB-1K5A series

EMC (Compliant with IEC 60601-1-2 4th Ed. Requirements)

| | | |
|-----------------------------------|---------------------------|---|
| EMC / Emissions | | EN / BS EN 55011, BS EN / EN/ BS EN 55032 : Class B EN/ BS EN 55014-1 (for MEB-1K5A24T AAA) CISPR 11, CISPR 32 : Class B KS C 9832 Compliance to FCC Title 47 Class |
| Immunity to | | BS EN / EN 55035, KS C 9835, EN/ BS EN 55014-2 (for MEB-1K5A24T AAA) |
| Electrostatic Discharge | IEC 61000-4-2 | Level 4 Criteria A ⁽⁹⁾⁽¹³⁾ Air Discharge: 15 kV Contact Discharge: 8 kV |
| Radiated Field | IEC 61000-4-3 | Criteria A ⁽⁹⁾ 80 MHz-2700 MHz, 10 V/m AM modulation Level 2 Criteria A ⁽⁹⁾⁽¹³⁾ 385 MHz-5785 MHz, 28 V/m Pulse mode and other Modulation |
| Electrical Fast Transient / Burst | IEC 61000-4-4 | Level 3 Criteria A ⁽⁹⁾ 2 kV |
| Surge | IEC 61000-4-5 | Level 3 Criteria A ⁽⁹⁾⁽¹³⁾ Common Mode ⁽¹¹⁾ : 2 kV Differential Mode ⁽¹²⁾ : 1 kV |
| Conducted | IEC 61000-4-6 | Level 2 Criteria A ⁽⁹⁾⁽¹³⁾ 150 kHz-80 MHz, 3 Vrms, 6 Vrms, 20 Vrms at ISM bands and Amateur radio bands |
| Power Frequency Magnetic Fields | IEC 61000-4-8 | Criteria A ⁽⁹⁾⁽¹³⁾ Magnetic field strength 30 A/m |
| Voltage Dips | IEC 61000-4-11 | 30% 10 ms Criteria A ⁽⁹⁾ 60% 100 ms Criteria B ⁽¹⁰⁾ 100% 5000 ms Criteria B ⁽¹⁰⁾ |
| Voltage Dips ⁵⁾ | IEC 60601-1-2 | Criteria A ⁽⁹⁾ @1200 W 0% UT, 0.5 cycle(10 ms) (0°,45°,90°,135°,180°,225°,270°,315°,360°) Criteria B ⁽¹⁰⁾ , can meet Criteria A with 1000 W or lower load 0% UT, 1 cycle (20 ms), 0° Criteria B ⁽¹⁰⁾ 70% U T, 25 cycle (500 ms) , 0° Criteria B ⁽¹⁰⁾ |
| Harmonic Current Emissions | IEC/EN/BS EN 61000-3-2 | Meet Class A limit |
| Voltage Fluctuation and Flicker | IEC/EN/BS EN 61000-3-3 | |

(9) Criteria A: Normal performance within the specification limits

(10) Criteria B: Output out of regulation, or shuts down during test. Automatically restored to normal operation after test.

(11) Asymmetrical: Common mode (Line to earth)

(12) Symmetrical: Differential mode (Line to line)

(13) Compliant with IEC60601-1-2 4th Edition

Medical / Industrial AC-DC Power Supply

1500 W Series with 5 V/2 A Standby / MEB-1K5A series

Dimensions

Mechanical drawing

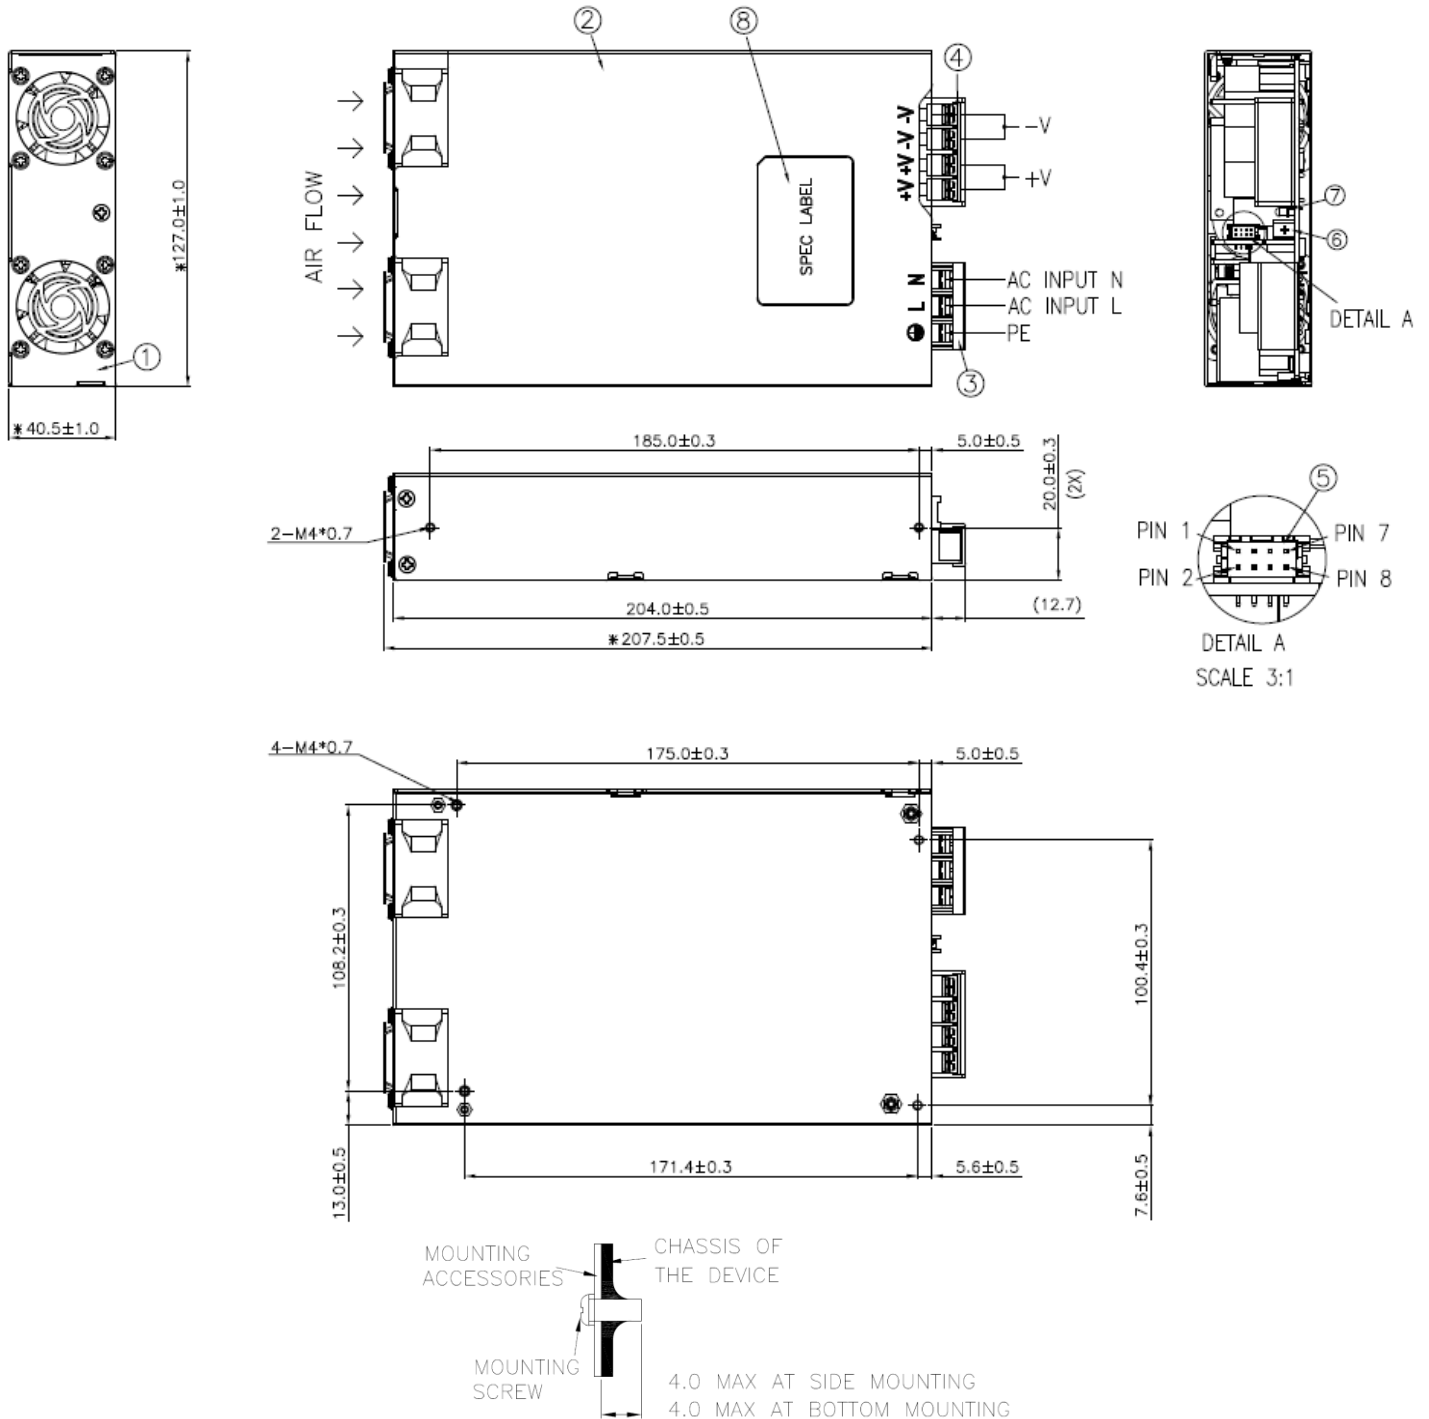


Fig. 4

Notes:

1. Bottom mounting, maximum penetration 4.0 mm from outside face of chassis. (refer to Fig.4)
2. Side mounting, maximum penetration 4.0 mm from outside face of chassis. (refer to Fig.4)
3. Recommended mounting torque of the product is 5 ~ 8 kgf.cm.

Medical / Industrial AC-DC Power Supply

1500 W Series with 5 V/2 A Standby / MEB-1K5A series

Connector Definition and Pin Assignment

| Item | Part Name | Remarks |
|------|--|---------|
| 1 | Chassis (SGCC 0.8T) | Nature |
| 2 | Cover (SGCC 0.8T) | Nature |
| 3 | Input Terminal DECA T25-E03H03 | Black |
| 4 | Output Terminal ANYTEK YK50A0423009G | Black |
| 5 | Control Connector WAFER: CVILUX CI0108P1HDL-NH or EQUIVALENT MATING HOUSING: CVILUX CI0108SD0L0 or EQUIVALENT TERMINAL: CVILUX CI01TD21PE0 or EQUIVALENT <u>Pin Assignment</u> Pin 1: Current Sharing Pin 2: Remote On/Off + Pin 3: GND Pin 4: Remote On/Off - Pin 5: GND Pin 6: GND Pin 7: 5 V Output Pin 8: 5 V Output | - |
| 6 | VR | - |
| 7 | LED | Green |
| 8 | Spec Label | White |

Medical / Industrial AC-DC Power Supply

1500 W Series with 5 V/2 A Standby / MEB-1K5A series

Functions

Start-up Time

The time required for the output voltage to reach 90% of its final steady state value, after the input voltage is applied

Rise Time

The time required for the output voltage to change from 10% to 90% of its final steady state value.

Hold-up Time

Time between the collapse of the AC input voltage, and the output falling to 90% of its steady state value

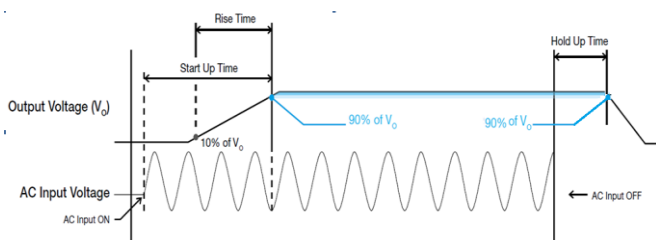


Figure 5. Time Sequence

Dynamic Response (Main Output)

The power supply output voltage will remain within $\pm 10\%$ of its steady state value, when subjected to a dynamic load 5 to 100% of its rated current.

5 to 100% Load

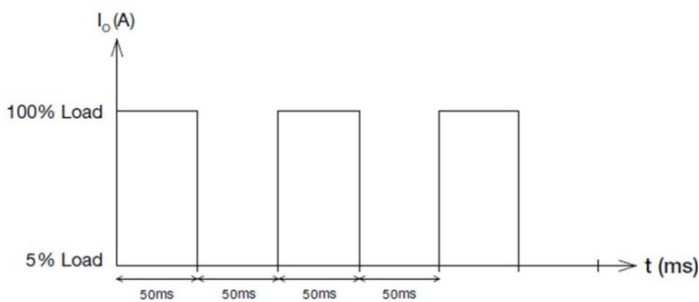


Figure 6. Dynamic Load

Inrush Current

Inrush current is the input current that occurs when the input voltage is first applied. For AC input voltages, the maximum peak value of inrush current will occur during the first half cycle of the applied AC voltage. This peak value decreases exponentially during subsequent cycles of AC voltage.

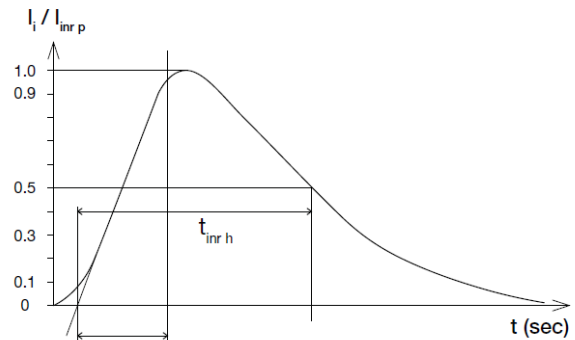


Figure 7. Inrush Current

Overvoltage Protection

The power supply's overvoltage circuit will be activated when its internal feedback circuit fails. The output voltage shall not exceed its specifications defined on Page 5 under "Protections". Power supply will latch off, and require removal/re-application of input AC voltage in order to restart.

Overload & Over current Protections

The power supply (24V)'s main output Overload (OLP) and Over current (OCP) protections is achieved by constant output current control. If the output current increases higher than rated current, the current will be clamped to be constant ($< 130\%$ rated current), output voltage will then drop if output impedance keeps decreasing in the constant current control. Finally output under voltage protection will be triggered if the output voltage falls below 75% rated value and enters "Hiccup mode" (Auto-Recovery). The power supply will recover once the fault condition causing the OLP and OCP is removed and IO is back within the specified limit.

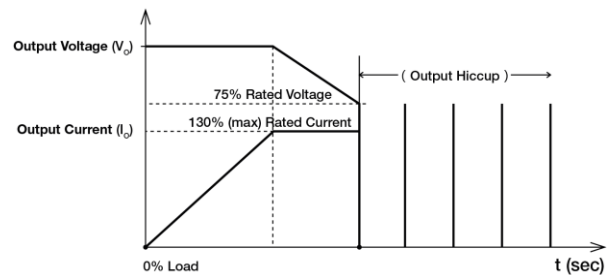


Figure 8. Hiccup at OLP/OCP

Additionally, if the lout is $> 100\%$ for a prolong period of time (depending on the load), the Over Temperature Protection (OTP) may be activated due to high temperature on critical components. The power supply will then go into latch mode.

Medical / Industrial AC-DC Power Supply

1500 W Series with 5 V/2 A Standby / MEB-1K5A series

Short Circuit Protection


Output OLP/OCF function also provides protection against short circuits. When a short circuit is applied, the output current will operate in "Hiccup mode", The power supply will return to normal operation after the short circuit is removed.

Over Temperature Protection

As mentioned above, the power supply also has Over Temperature Protection (OTP). This is activated when the overload condition persists for an extended duration and the output current is below the overload trigger point but >100% load. In the event of a higher operating temperature condition at 100% load, the power supply will run into OTP when the surrounding air temperature is higher than the operating temperature. When activated, the output voltage will go into latch mode until the input voltage is removed; then, reapplied, and the surrounding air temperature drops to its normal operating temperature.

Remote On/Off

Remote ON/OFF signal can be used to enable or disable the main output. When the main output is disabled, the +5 V Standby output will stop operating. System can use a switch to conduct to disable the main output. The signal can be floated (no connection to the signal), in order to enable the main output.

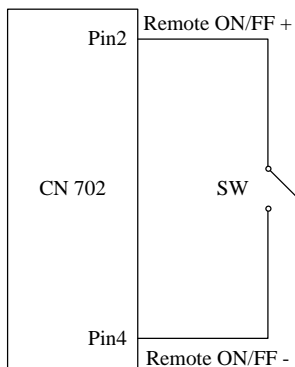

| SW OFF (open) | SW ON (close) |
|----------------------|-----------------------|
| Power supply turn on | Power supply turn off |

Figure 9. Remote On/Off Connection

Voltage Adjustment

The power supply provides a potentiometer for user to adjust the output voltage. The output voltage is designed to be able to adjust up to $\pm 10\%$ of rated voltage, when the output is adjusted below nominal value, the maximum output current is the same as the nominal output, when the output is adjusted above nominal value, the output power cannot exceed the nominal maximum power (the maximum output current will be reduced accordingly).

Current Sharing

The power supply has an active current sharing circuit for the main output; it can realize the output current to be balanced when customer is using up to six power supplies in parallel to achieve higher output power. A one wire current share bus is used to achieve current sharing between units, the current share bus must be connected together among different units (pin 1 of item5, refer to power supply mechanical drawing and pin assignment). The difference in output voltage can impact the current sharing accuracy, all the units to be paralleled, please use the voltage adjustment function to set the voltage to be ± 50 mV of the set value, and the maximum output current set at 80% of rated output current.

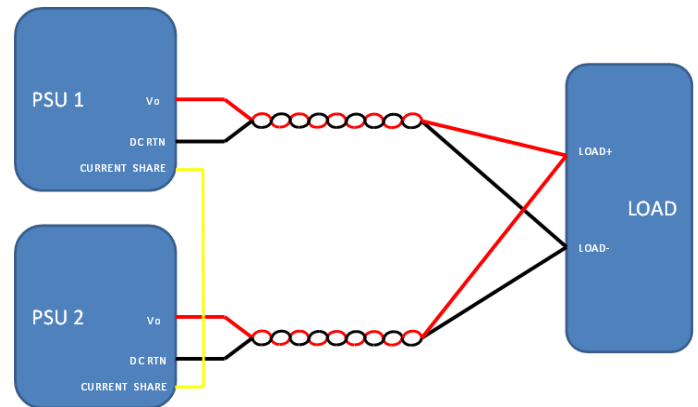


Fig. 10: Parallel connection

Medical / Industrial AC-DC Power Supply

1500 W Series with 5 V/2 A Standby / MEB-1K5A series

Certificate



All Delta Medical Power products conform to the European directive 2011/65/EU. ROHS is the abbreviation for "Restriction of the use of certain hazardous substances"



Delta has been certified as meeting the requirement of ISO 13485: 2003 and EN ISO 13485:2012 for the design and manufacture of switching power supply and adaptor for medical device.



In addition to a UL Total Certification Program (TCP) approved client laboratory for IEC 60950 and IEC 60065. Delta also has participated UL Client Test Data Program (CDTP) for IEC 60601

Attention

Delta provides all information in the datasheets on an "AS IS" basis and does not offer any kind of warranty through the information for using the product. In the event of any discrepancy between the information in the catalog and datasheets, the datasheets shall prevail (please refer to www.DeltaPSU.com for the latest datasheets information). Delta shall have no liability of indemnification for any claim or action arising from any error for the provided information in the datasheets. Customer shall take its responsibility for evaluation of using the product before placing an order with Delta.

Delta reserves the right to make changes to the information described in the datasheets without notice.

Manufacturer and Authorized Representatives Information

Manufacturer

Thailand

Delta Electronics (Thailand) PCL.
909 Pattana 1 Rd., Muang, Samutprakarn, 10280 Thailand

Taiwan

Delta Electronics, Inc.
3 Tungyuan Road, Chungli Industrial Zone, Taoyuan County
32063, Taiwan

Authorized Representatives

The Netherlands

Delta Greentech (Netherlands) B.V.
Zandsteen 15, 2132 MZ Hoofddorp, The Netherlands

United Kingdom

Delta Electronics Europe Limited
1 Redwood Court, Peel Park Campus,
East Kilbride, Glasgow, G74 5PF, United Kingdom

Authorised, valued-added distributor

Australia & New Zealand



Powerbox Australia Pty Ltd

Sydney Head Office
4 Beaumont Road,
Mt Kuring-Gai, NSW 2080
Australia



1800 251 380



sales@powerbox.com.au



powerbox.com.au

Powerbox Pacific Ltd

New Zealand Sales Office
1a Henry Rose Place,
Albany, Auckland
New Zealand 0632



09 4158 320



sales@powerbox.co.nz



powerbox.co.nz